

U7 Switch 1 will select even parity if off and odd parity if on.  
 Switch 2 and 3 on select 5 bits/character.  
 Switch 2 off and 3 on select 6 bits/character.  
 Switch 2 on and 3 off selects 7 bits/character.  
 Switch 2 and 3 off selects 8 bits/character.  
 Switch 4 on selects 1 stop bit, off selects 2.  
 Switch 5 on selects parity, off selects no parity.

